

AOLEvent 4.1

De Wiki

Aller à : [navigation](#), [rechercher](#)

[AOLEvent 4.1](#)

```
public class AOLEvent {  
  
    public static void main(String[] args) throws PatriusException {  
  
        // AOL event with default values  
        final AnomalyDetector aolEvent1 = new  
AnomalyDetector(PositionAngle.TRUE, FastMath.PI);  
  
        // Same event with customized convergence values  
        final double maxCheck = 0.5 * AbstractDetector.DEFAULT_MAXCHECK;  
        final double threshold = 2. * AbstractDetector.DEFAULT_THRESHOLD;  
        final AnomalyDetector aolEvent2 = new  
AnomalyDetector(PositionAngle.TRUE, FastMath.PI, maxCheck, threshold);  
  
        // Same event with customized convergence values and specifying the  
action to be done when events occurred  
        final AnomalyDetector aolEvent3 = new  
AnomalyDetector(PositionAngle.TRUE, FastMath.PI, maxCheck, threshold,  
Action.STOP);  
  
        // Same event with customized convergence values, specifying the  
action to be done when events occurred  
        // and specifying the event is removed once it is occurred  
        final AnomalyDetector aolEvent4 = new  
AnomalyDetector(PositionAngle.TRUE, FastMath.PI, maxCheck, threshold,  
Action.STOP, true);  
  
        System.out.println("Anomaly of the event: " +  
FastMath.toDegrees(aolEvent4.getAnomaly()) + " deg");  
        System.out.println("Anomaly of the event: " +  
aolEvent4.getAnomalyType());  
        System.out.println("Max check interval of the event: " +  
aolEvent4.getMaxCheckInterval() + " s");  
        System.out.println("Threshold of the event: " +  
aolEvent4.getThreshold() + " s");  
        System.out.println("Remove the event after occurring: " +  
aolEvent4.shouldBeRemoved());  
        System.out.println();  
        System.out.println("Slope selection of the event: " +  
aolEvent4.getSlopeSelection());  
        System.out.println("Max iteration count of the event: " +  
aolEvent4.getMaxIterationCount());  
    }  
}
```

}

Récupérée de « http://patrius.cnes.fr/index.php?title=AOLEvent_4.1&oldid=1832 »

Menu de navigation

Outils personnels

- [3.144.103.20](#)
- [Discussion avec cette adresse IP](#)
- [Créer un compte](#)
- [Se connecter](#)

Espaces de noms

- [Page](#)
- [Discussion](#)

Variantes

Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

Plus

Rechercher

<input type="text"/>	<input type="button" value="Rechercher"/>	<input type="button" value="Lire"/>
----------------------	---	-------------------------------------

PATRIUS

- [Welcome](#)

Evolutions

- [Main differences between V4.15 and V4.14](#)
- [Main differences between V4.14 and V4.13](#)

- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)
- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)
- [Main differences between V4.0 and V3.4.1](#)

User Manual

- [User Manual 4.15](#)
- [User Manual 4.14](#)
- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)
- [User Manual 4.3](#)
- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)
- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

Tutorials

- [Tutorials 4.15](#)
- [Tutorials 4.14](#)
- [Tutorials 4.13.5](#)
- [Tutorials 4.12.1](#)
- [Tutorials 4.8.1](#)
- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

Links

- [CNES freeware server](#)

Navigation

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)
- [Aide](#)

Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)
- [Information sur la page](#)
- [Citer cette page](#)
- Dernière modification de cette page le 18 décembre 2018 à 10:20.
- [Politique de confidentialité](#)
- [À propos de Wiki](#)
- [Avertissements](#)
-