

# Main differences between V4.1.1 and V4.1

De Wiki

Aller à : [navigation](#), [rechercher](#)

[Main differences between V4.1.1 and V4.1](#)

**PATRIUS** V4.1.1 is a minor release just correcting some bugs of the V4.1, bugs linked to the consistency with [GENOPUS](#) V2.0. Thus it is not necessary to have a specific User Manual (the [V4.1](#) one remains sufficient)

## Bugs fixes

- Corrections on the Vehicle class to be consistent with [GENOPUS](#) V2.0.
- Corrections on the ForceModelsData class to be consistent with [GENOPUS](#) V2.0.
- Adding some getters to be consistent with [GENOPUS](#) V2.0.

Récupérée de

« [http://patrius.cnes.fr/index.php?title=Main\\_differences\\_between\\_V4.1.1\\_and\\_V4.1&oldid=1875](http://patrius.cnes.fr/index.php?title=Main_differences_between_V4.1.1_and_V4.1&oldid=1875) »

## Menu de navigation

### Outils personnels

- [3.139.108.48](#)
- [Discussion avec cette adresse IP](#)
- [Créer un compte](#)
- [Se connecter](#)

### Espaces de noms

- [Page](#)
- [Discussion](#)

### Variantes

### Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

### Plus

## Rechercher

## PATRIUS

- [Welcome](#)

## Evolutions

- [Main differences between V4.15 and V4.14](#)
- [Main differences between V4.14 and V4.13](#)
- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)
- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)
- [Main differences between V4.0 and V3.4.1](#)

## User Manual

- [User Manual 4.15](#)
- [User Manual 4.14](#)
- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)
- [User Manual 4.3](#)
- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)

- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

## Tutorials

- [Tutorials 4.15](#)
- [Tutorials 4.14](#)
- [Tutorials 4.13.5](#)
- [Tutorials 4.12.1](#)
- [Tutorials 4.8.1](#)
- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

## Links

- [CNES freeware server](#)

## Navigation

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)
- [Aide](#)

## Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)
- [Information sur la page](#)
- [Citer cette page](#)

• Dernière modification de cette page le 20 décembre 2018 à 15:35.

- [Politique de confidentialité](#)
- [À propos de Wiki](#)
- [Avertissements](#)

- 