

# Tutorials 4.4 Vehicle

De Wiki

Aller à : [navigation](#), [rechercher](#)

[Tutorials 4.4 Vehicle](#)

## What is an Assembly ?

As explained more in details in the user manual, the [Assembly](#) is a mean to build a vehicle. The main principles are the following ones:

- An [Assembly](#) is described by its sub parts (and can be made of only one).
- Each of these parts is defined by a name, a frame to know its position and orientation at any time, and a list of properties.
- The first created part is the "main part". Its associated frame defines the "main frame" of the vehicle.

The [Assembly](#)'s creation is made through a "builder" object as in the example below.

### Code examples:

- [Vehicle with mass property](#)
- [Vehicle with mass property and tank](#)

## Using the Vehicle class

Since V3.4 version, it is now possible to use the [Vehicle](#) class which is simpler to use for basic spacecraft definition. the following examples show how to define:

- the dry mass and the shape
- the propulsive properties
- a full configuration

### Code example:

- [Using the Vehicle class](#)
- [Using the Vehicle class with Propulsive and Tank properties](#)
- [Using the Vehicle class with a full configuration](#)

Récupérée de « [http://patrius.cnes.fr/index.php?title=Tutorials\\_4.4\\_Vehicle&oldid=2487](http://patrius.cnes.fr/index.php?title=Tutorials_4.4_Vehicle&oldid=2487) »  
[Catégorie](#) :

- [Tutorials 4.4](#)

## Menu de navigation

### Outils personnels

- [3.133.108.172](#)
- [Discussion avec cette adresse IP](#)

- [Créer un compte](#)
- [Se connecter](#)

## Espaces de noms

- [Page](#)
- [Discussion](#)

## Variantes

## Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

## Plus

## Rechercher

## PATRIUS

- [Welcome](#)

## Evolutions

- [Main differences between V4.15 and V4.14](#)
- [Main differences between V4.14 and V4.13](#)
- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)

- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)
- [Main differences between V4.0 and V3.4.1](#)

## **User Manual**

- [User Manual 4.15](#)
- [User Manual 4.14](#)
- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)
- [User Manual 4.3](#)
- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)
- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

## **Tutorials**

- [Tutorials 4.15](#)
- [Tutorials 4.14](#)
- [Tutorials 4.13.5](#)
- [Tutorials 4.12.1](#)
- [Tutorials 4.8.1](#)
- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

## **Links**

- [CNES freeware server](#)

## **Navigation**

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)

- [Aide](#)

## Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)
- [Information sur la page](#)
- [Citer cette page](#)
  
- Dernière modification de cette page le 3 octobre 2019 à 12:33.
  
- [Politique de confidentialité](#)
- [À propos de Wiki](#)
- [Avertissements](#)
  
- 