

# User Manual 4.10 Orientation

De Patrius

[Aller à la navigation](#) [Aller à la recherche](#)

La version imprimable n'est plus prise en charge et peut comporter des erreurs de génération.  
Veuillez mettre à jour les signets de votre navigateur et utiliser à la place la fonction d'impression par défaut de celui-ci.

## Introduction

### Scope

The purpose of this chapter is to describe the orientation package.

An orientation provider is an interface that provides methods to return an angle as a function of a spacecraft state.

### Javadoc

Library	Javadoc
Patrius	<a href="#">Package fr.cnes.sirius.patrius.attitudes.orientations</a>

### Links

None as of now.

### Useful Documents

None as of now.

### Package Overview

## Features Description

The orientations package is designed similarly to attitude providers:

- An interface `OrientationAngleProvider` returns an angle given a spacecraft state (similarly to `AttitudeProvider` which returns an `Attitude`)
- An interface `OrientationAngleLaw` gathers orientation laws and is similar to `AttitudeLaw`
- An interface `OrientationAngleLeg` is a time-bounded leg and is similar to `AttitudeLeg`
- An interface `OrientationAngleProfile` is a profile of orientation angles and is similar to `AttitudeProfile`
- A class `OrientationAngleLawLeg` is a law leg and is similar to `AttitudeLawLeg`
- A class `OrientationAngleLawLegsSequence` is a sequence of `OrientationAngleLawLeg` and is similar to `AttitudeLawLegsSequence`
- A class `OrientationAngleProfileSequence` is a sequence of `OrientationAngleProfile` and is similar to `AttitudeProfileSequence`

Note: the package currently does not provide any implementation of `OrientationAngleProvider` interface except for constant angles.

# Getting Started

Use is identical to attitudes. See the page for examples.

## Contents

### Interfaces

Interface	Summary	Javadoc
<b>OrientationAngleProvider</b>	Interface for all orientation angles providers.	<a href="#">...</a>
<b>OrientationAngleLaw</b>	Interface for all orientation angles laws.	<a href="#">...</a>
<b>OrientationAngleLeg</b>	Interface for all orientation angles legs.	<a href="#">...</a>
<b>OrientationAngleProfile</b>	Interface for all orientation angles profiles.	<a href="#">...</a>

### Classes

Class	Summary	Javadoc
<b>OrientationAngleLawLeg</b>	Orientation angle law leg.	<a href="#">...</a>
<b>OrientationAngleLawLegsSequence</b>	Sequence of Orientation angle legs.	<a href="#">...</a>
<b>OrientationAngleProfileSequence</b>	Sequence of Orientation angle profiles.	<a href="#">...</a>

Récupérée de « [http://patrius.cnes.fr/index.php?title=User\\_Manual\\_4.10\\_Orientation&oldid=3252](http://patrius.cnes.fr/index.php?title=User_Manual_4.10_Orientation&oldid=3252) »

Catégories :

- [User Manual 4.4 Attitude](#)
- [User Manual 4.10 Attitude](#)

## Menu de navigation

### Outils personnels

- [Se connecter](#)

### Espaces de noms

- [Page](#)
- [Discussion](#)

français

### Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Voir l'historique](#)
- [Exporter en PDF](#)

Plus

## Rechercher

	Rechercher	Lire
--	------------	------

## PATRIUS

- [Welcome](#)

## Evolutions

- [Main differences between V4.15 and V4.14](#)
- [Main differences between V4.14 and V4.13](#)
- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)
- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)
- [Main differences between V4.0 and V3.4.1](#)

## User Manual

- [User Manual 4.15](#)
- [User Manual 4.14](#)
- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)
- [User Manual 4.3](#)

- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)
- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

## Tutorials

- [Tutorials 4.15](#)
- [Tutorials 4.14](#)
- [Tutorials 4.13.5](#)
- [Tutorials 4.12.1](#)
- [Tutorials 4.8.1](#)
- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

## Links

- [CNES freeware server](#)

## Navigation

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)
- [Aide](#)

## Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Lien permanent](#)
- [Informations sur la page](#)
- [Parcourir les propriétés](#)
- [Citer cette page](#)

- La dernière modification de cette page a été faite le 10 novembre 2022 à 09:07.
- Cette page a été consultée 58 fois.
- [Politique de confidentialité](#)
- [À propos de Patrius](#)
- [Avertissements](#)

☒