

User Manual 4.15 Orbital parameters

De Wiki

Aller à : [navigation](#), [rechercher](#)

[User Manual 4.15 Orbital parameters](#)

Introduction

Scope

The "Orbital parameters" package contains classes to represent the orbital state of a space object. Several types of parameters are available (cartesian, keplerian, equinoctial... with different position angle definitions : true, mean, eccentric). Orbital parameters do not define a date nor a frame. To fully define an orbit, including date and frame, please refer to [FDY_Orbits_Home Orbits].

Javadoc

The classes for orbital parameters description are available in the package
`fr.cnes.sirius.patrius.orbits.orbitalparameters`.

Library

Patrius [\[\[\[:Modèle:JavaDoc4.15\]\]/fr/cnes/sirius/patrius/orbits/orbitalparameters/package-summary.html](#)
Package `fr.cnes.sirius.patrius.orbits.orbitalparameters`]

Javadoc

Links

None as of now.

Useful Documents

None as of now.

Package Overview

All different orbital parameters types extend the abstract class `AbstractOrbitalParameters` and implement the interface `IOrbitalParameters` (the following class package may not contain all classes extending `AbstractOrbitalParameters` class).



All conversions methods from one type to another are specifically handled by each type of orbital parameters, thus optimising conversions.

Features Description

Available parameters

The available parameters types are :

- Cartesian : X, Y, Z, Vx, Vy, Vz
- Keplerian : a, e, i, perigee argument, right ascension of ascending node, anomaly (in each position

- angle types)
- Equinoctial : a, ex, ey (eccentricity vector), hx, hy (inclination vector), longitude argument (in each position angle types)
- Alternate equinoctial : n (mean motion), ex, ey (eccentricity vector), hx, hy (inclination vector), longitude argument (in each position angle types but stored in mean)
- Stela Equinoctial : a, ex, ey (eccentricity vector), ix, iy (inclination vector), mean longitude argument
- Circular : a, ex, ey (eccentricity vector), i, right ascension of ascending node, latitude argument (in each position angle types)
- Apsis (using radius) : periapsis, apoapsis, i, perigee argument, right ascension of ascending node, anomaly (in each position angle types)
- Apsis (using altitude) : altitude of periapsis, altitude of apoapsis, i, perigee argument, right ascension of ascending node, anomaly (in each position angle types)
- Equatorial : a, e, longitude of the periapsis ($\omega + \Omega$), ix (first component of inclination vector), iy (second component of inclination vector), anomaly (in each position angle types)
- Reentry : altitude, latitude, longitude, velocity norm, slope of velocity, azimuth of velocity

Getting Started

Any orbital parameters can be defined using the chosen constructor. Here is an example using circular parameters and true anomaly:

```
final CircularParameters circularParameters = new CircularParameters(10000E3,
0.1, 0.2, 0.3, 0.4, 0.5, PositionAngle.TRUE, Constants.EGM96_EARTH_MU);
```

Then conversions to any orbital parameters type can directly be obtained using the conversion routines. Here is an example of conversion to equinoctial parameters:

```
final EquinoctialParameters equinoctialParameters = circularParameters
.getEquinoctialParameters();
```

Contents

Interfaces

None as of now.

Classes

Class	Summary	Javadoc
CartesianParameters	Cartesian parameters	[[Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/CartesianParameters.html ...]
KeplerianParameters	Keplerian parameters	[[Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/KeplerianParameters.html ...]
CircularParameters	Circular parameters	[[Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/CircularParameters.html ...]
EquinoctialParameters	Equinoctial parameters	[[Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/EquinoctialParameters.html ...]

AlternateEquinoctialParameters	Alternate Equinoctial [[[:Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/AlternateEquinoctialParameters.html parameters ...] object.
StelaEquinoctialParameters	Stela equinoctial parameters [[[:Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/StelaEquinoctialParameters.html ...] object.
EquatorialParameters	Equatorial parameters [[[:Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/EquatorialParameters.html ...] object.
ApsisRadiusParameters	Apsis parameters object [[[:Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/ApsisRadiusParameters.html ...] (using radius).
ApsisAltitudeParameters	Apsis parameters object [[[:Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/ApsisAltitudeParameters.html ...] (using altitude).
ReentryParameters	Reentry parameters [[[:Modèle:JavaDoc4.15]]/fr/cnes/sirius/patrius/orbits/orbitalparameters/ReentryParameters.html ...] object.

Récupérée de

« http://patrius.cnes.fr/index.php?title=User_Manual_4.15_Orbital_parameters&oldid=3854 »

Catégorie :

- [User Manual 4.15 Flight Dynamics](#)

Menu de navigation

Outils personnels

- [3.16.51.237](#)
- [Discussion avec cette adresse IP](#)
- [Créer un compte](#)
- [Se connecter](#)

Espaces de noms

- [Page](#)
- [Discussion](#)

Variantes

Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

Plus

Rechercher

	Rechercher	Lire
--	------------	------

PATRIUS

- [Welcome](#)

Evolutions

- [Main differences between V4.15 and V4.14](#)
- [Main differences between V4.14 and V4.13](#)
- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)
- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)
- [Main differences between V4.0 and V3.4.1](#)

User Manual

- [User Manual 4.15](#)
- [User Manual 4.14](#)
- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)
- [User Manual 4.3](#)
- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)

- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

Tutorials

- [Tutorials 4.15](#)
- [Tutorials 4.14](#)
- [Tutorials 4.13.5](#)
- [Tutorials 4.12.1](#)
- [Tutorials 4.8.1](#)
- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

Links

- [CNES freeware server](#)

Navigation

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)
- [Aide](#)

Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)
- [Information sur la page](#)
- [Citer cette page](#)

- Dernière modification de cette page le 21 novembre 2024 à 15:28.
- [Politique de confidentialité](#)
- [À propos de Wiki](#)
- [Avertissements](#)
- 