

UsingVehicleClassWithPropulsiveAndTankProperty 4.5.1

De Wiki

Aller à : [navigation](#), [rechercher](#)

[UsingVehicleClassWithPropulsiveAndTankProperty 4.5.1](#)

```
public class UsingVehicleClassWithPropulsiveAndTankProperty {

    public static void main(String[] args) throws PatriusException {

        Vehicle veh = new Vehicle();

        // Dry mass
        final double dryMass = 1000.;
        veh.setDryMass(dryMass);

        // Shape : A vehicle object must have a main shape !
        final double lref = 1.;
        veh.setMainShape(new Sphere(Vector3D.ZERO, lref));

        // Propulsive properties

        // Tanks
        final double merg1 = 100.;
        final TankProperty tank1 = new TankProperty(merg1);
        final double merg2 = 200.;
        final TankProperty tank2 = new TankProperty(merg2);
        veh.addTank("TANK1", tank1);
        veh.addTank("TANK2", tank2);

        // Engine
        final double thrust = 400.;
        final double isp = 320.;
        final PropulsiveProperty engine = new PropulsiveProperty(thrust,
isp);
        veh.addEngine("PROP", engine);

        // Getting the corresponding assembly
        final Assembly assembly =
veh.createAssembly(FramesFactory.getCIRF());

        // Getting the corresponding mass model (useful for propagation,
manoeuvres, ...)
        final MassProvider mm = new MassModel(assembly);

        System.out.println("Name of the main part: " +
assembly.getMainPart().getName());
        System.out.println("Total mass: " + mm.getTotalMass());
    }
}
```

```

        for (int i = 0; i < veh.getEnginesList().size(); i++) {
            System.out.println(veh.getEnginesList().get(i).getPartName());
            System.out.println("Thrust =
"+veh.getEnginesList().get(i).getThrust(null)+" N");
            System.out.println("Isp =
"+veh.getEnginesList().get(i).getIsp(null)+" s");
        }

        for (int i = 0; i < veh.getTanksList().size(); i++) {
            System.out.println(veh.getTanksList().get(i).getPartName()+" :
"+veh.getTanksList().get(i).getMass()+" kg");
        }
    }
}

```

Récupérée de

«

http://patrius.cnes.fr/index.php?title=UsingVehicleClassWithPropulsiveAndTankProperty_4.5.1&oldid=2718 »

Menu de navigation

Outils personnels

- [18.224.55.193](#)
- [Discussion avec cette adresse IP](#)
- [Créer un compte](#)
- [Se connecter](#)

Espaces de noms

- [Page](#)
- [Discussion](#)

Variantes

Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

Plus

Rechercher

<input type="text"/>	<input type="button" value="Rechercher"/>	<input type="button" value="Lire"/>
----------------------	---	-------------------------------------

PATRIUS

- [Welcome](#)

Evolutions

- [Main differences between V4.15 and V4.14](#)
- [Main differences between V4.14 and V4.13](#)
- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)
- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)
- [Main differences between V4.0 and V3.4.1](#)

User Manual

- [User Manual 4.15](#)
- [User Manual 4.14](#)
- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)

- [User Manual 4.3](#)
- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)
- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

Tutorials

- [Tutorials 4.15](#)
- [Tutorials 4.14](#)
- [Tutorials 4.13.5](#)
- [Tutorials 4.12.1](#)
- [Tutorials 4.8.1](#)
- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

Links

- [CNES freeware server](#)

Navigation

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)
- [Aide](#)

Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)
- [Information sur la page](#)
- [Citer cette page](#)

• Dernière modification de cette page le 17 août 2020 à 09:17.

- [Politique de confidentialité](#)
- [À propos de Wiki](#)
- [Avertissements](#)
-