

Tutorials 4.0 Vehicle

De Wiki

Aller à : [navigation](#), [rechercher](#)

[User Manual 4.11 Events detection: Presentation](#) > [Discussion utilisateur:3.14.80.45](#) > [Discussion utilisateur:3.143.228.40](#) > [Accueil](#) > [Tutorials 4.0 Vehicle](#)

What is an Assembly ?

As explained more in details in the user manual, the [Assembly](#) is a mean to build a vehicle. The main principles are the following ones:

- An [Assembly](#) is described by its sub parts (and can be made of only one).
- Each of these parts is defined by a name, a frame to know its position and orientation at any time, and a list of properties.
- The first created part is the "main part". Its associated frame defines the "main frame" of the vehicle.

The [Assembly](#)'s creation is made through a "builder" object as in the example below.

Code examples:

- [Vehicle with mass property](#)
- [Vehicle with mass property and tank](#)

Using the Vehicle class

Since V3.4 version, it is now possible to use the [Vehicle](#) class which is simpler to use for basic spacecraft definition. the following example shows how to define:

- the dry mass
- the shape
- the aerodynamic properties
- the propulsive properties

Code example: [Using the Vehicle class](#)

Récupérée de « http://patrius.cnrs.fr/index.php?title=Tutorials_4.0_Vehicle&oldid=1562 »
[Catégorie](#) :

- [Tutorials 4.0](#)

Menu de navigation

Outils personnels

- [3.145.78.155](#)
- [Discussion avec cette adresse IP](#)
- [Créer un compte](#)

- [Se connecter](#)

Espaces de noms

- [Page](#)
- [Discussion](#)

Variantes

Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

Plus

Rechercher

PATRIUS

- [Welcome](#)

Evolutions

- [Main differences between V4.13 and V4.12](#)
- [Main differences between V4.12 and V4.11](#)
- [Main differences between V4.11 and V4.10](#)
- [Main differences between V4.10 and V4.9](#)
- [Main differences between V4.9 and V4.8](#)
- [Main differences between V4.8 and V4.7](#)
- [Main differences between V4.7 and V4.6.1](#)
- [Main differences between V4.6.1 and V4.5.1](#)
- [Main differences between V4.5.1 and V4.4](#)
- [Main differences between V4.4 and V4.3](#)
- [Main differences between V4.3 and V4.2](#)
- [Main differences between V4.2 and V4.1.1](#)
- [Main differences between V4.1.1 and V4.1](#)
- [Main differences between V4.1 and V4.0](#)

- [Main differences between V4.0 and V3.4.1](#)

User Manual

- [User Manual 4.13](#)
- [User Manual 4.12](#)
- [User Manual 4.11](#)
- [User Manual 4.10](#)
- [User Manual 4.9](#)
- [User Manual 4.8](#)
- [User Manual 4.7](#)
- [User Manual 4.6.1](#)
- [User Manual 4.5.1](#)
- [User Manual 4.4](#)
- [User Manual 4.3](#)
- [User Manual 4.2](#)
- [User Manual 4.1](#)
- [User Manual 4.0](#)
- [User Manual 3.4.1](#)
- [User Manual 3.3](#)

Tutorials

- [Tutorials 4.5.1](#)
- [Tutorials 4.4](#)
- [Tutorials 4.1](#)
- [Tutorials 4.0](#)

Links

- [CNES freeware server](#)

Navigation

- [Accueil](#)
- [Modifications récentes](#)
- [Page au hasard](#)
- [Aide](#)

Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)
- [Information sur la page](#)

- [Citer cette page](#)

- Dernière modification de cette page le 27 mars 2018 à 14:04.

- [Politique de confidentialité](#)

- [À propos de Wiki](#)

- [Avertissements](#)

-